


Taps shown are for illustrative purposes only and may not match the specific product you have purchased. Please retain these instructions for future reference.


Note: Prior to installation flush out the pipe work to remove debris and then ensure that the water supply is turned off. It is recommended that this product is installed by a qualified plumber, and that isolation points are installed on the supply pipework to allow for easier maintenance.

This exploded view diagram illustrates the assembly of a mechanical component, likely a valve or actuator. The components are labeled as follows:





- A:** Top cap or housing.
- B:** O-ring or seal.
- C:** Gasket or seal.
- D:** Base flange or mounting plate.
- E:** Long vertical stem or shaft.
- F:** Nut or washer.
- G:** Washer or spacer.
- H:** Nut or washer.
- I:** Top cap or housing.
- J:** O-ring or seal.
- K:** Gasket or seal.
- L:** Base flange or mounting plate.
- M:** Top cap or housing.
- N:** O-ring or seal.
- O:** Gasket or seal.
- P:** Base flange or mounting plate.
- Q:** Actuator or motor.
- R:** Mounting bracket or base.
- S:** Long vertical stem or shaft.
- T:** Nut or washer.
- U:** Washer or spacer.
- V:** Nut or washer.
- W:** Base flange or mounting plate.

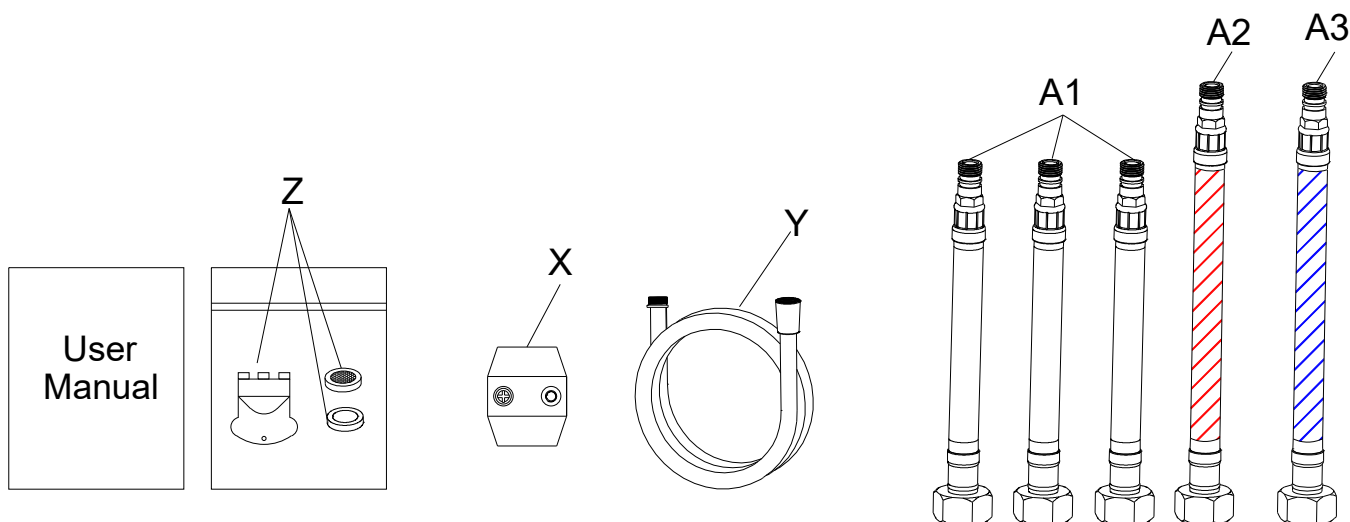


DIMENSIONS

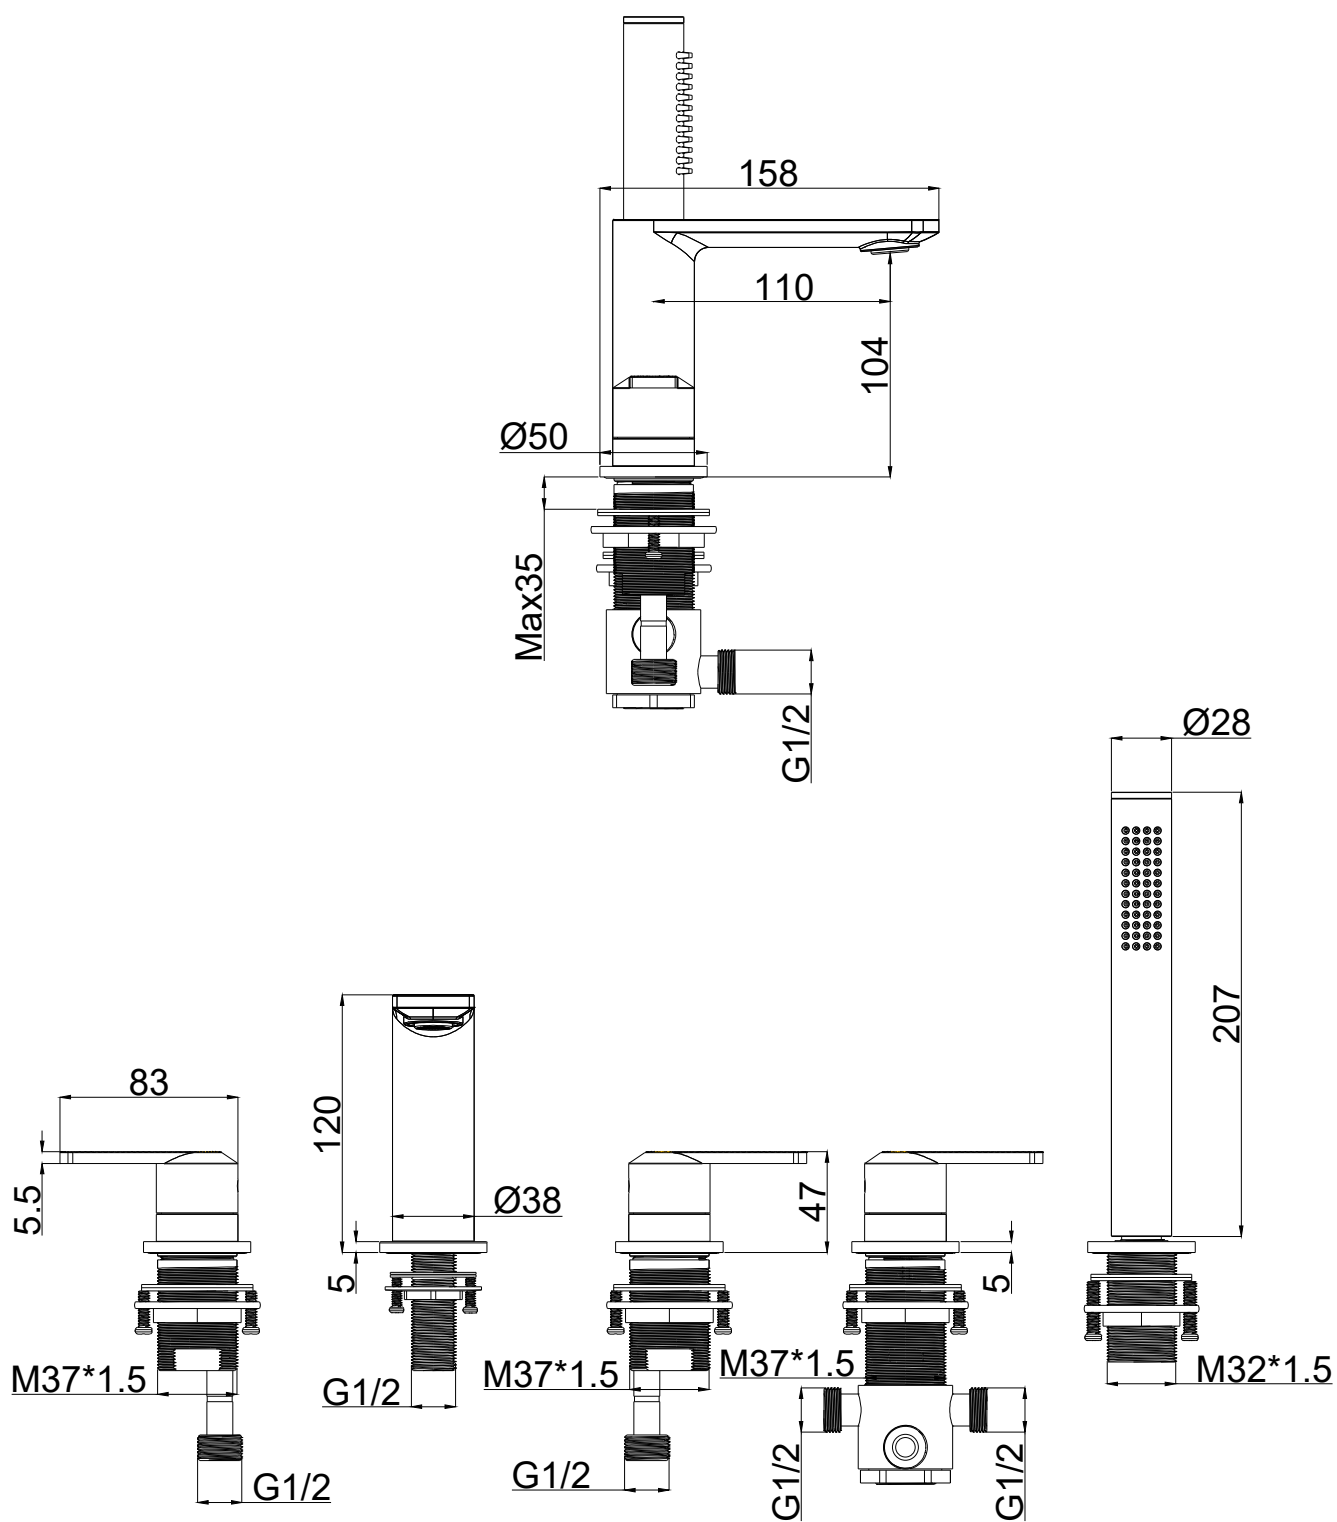

Min38-Max40 Min22-Max24 Min38-Max40 Min38-Max40 Min33-Max35

    


INSTALLATION-SPOUT ASSEMBLY

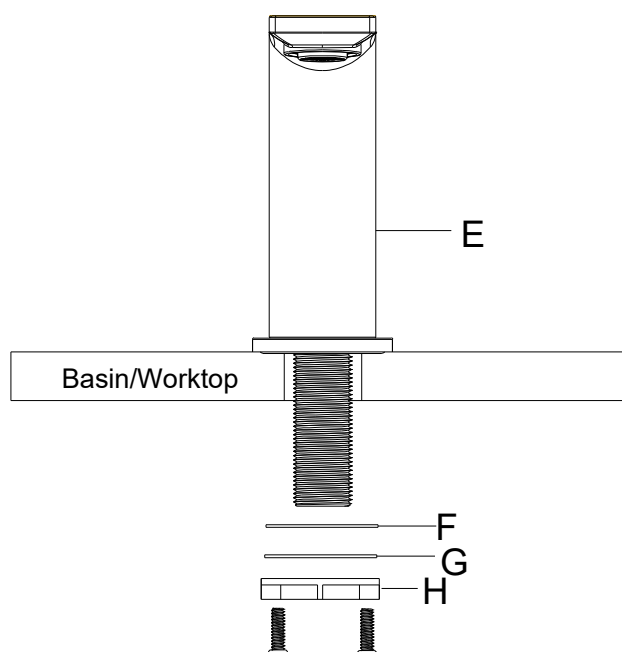

1.Pass the spout assembly(E) through the hole in the sink/benchtop until it is centered in the hole,and the O-ring on the base of the spout forms a seal around the hole.

2.Use rubber washer (F) , metal washer (G) , and fixing nut (H) to securely fasten (E) to the basin/workbench until it fits tightly against the bottom of the hole. Tighten the fixing screws with a screwdriver. Please be careful and do not over-tighten, as this may damage the basin/workbench.

INSTALLATION-HOT AND COLD VALVES

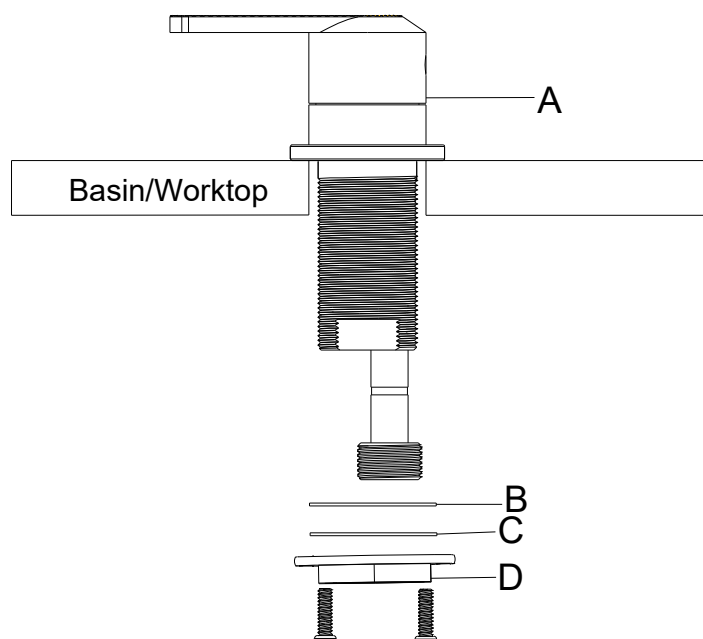


1. Differentiate cold water and hot water valve body(identifiable by the red and blue temperature indicator on the top of the handle)

2.Pass the valve main body (A) through the hole in the sink/benchtop until it is centered in the hole, and the O-ring on the base of the handle forms a seal around the hole.


3.Use rubber washer (B) , metal washer (C) , and fixing nut (D) to securely fasten (A) to the basin/workbench until it fits tightly against the bottom of the hole. Tighten the fixing screws with a screwdriver. Please be careful and do not over-tighten, as this may damage the basin/workbench.

INSTALL DIVERTER VALVE

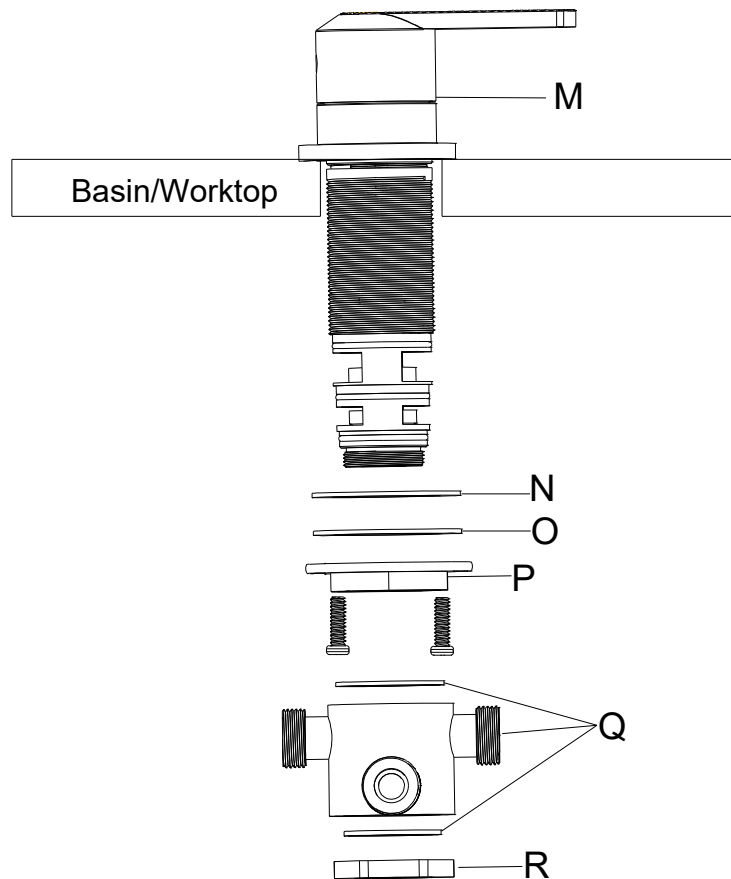


1. Pass the valve main body (M) through the hole in the sink/benchtop until it is centered in the hole, and the O-ring on the bottom of the handle base forms a seal around the hole.
2. Use rubber washer (N) , metal washer (O) , and fixing nut (P) to securely fasten (M) to the basin/workbench until it fits tightly against the bottom of the hole. Tighten the fixing screws with a screwdriver. Please be careful and do not over-tighten, as this may damage the basin/workbench.
3. Install the splitter fitting (Q) . Before installation, check if the wear rings at both ends of the splitter fitting have shifted, and then install the nut (R) after confirming there are no errors.

INSTALL HANDHEID SHOWER HOLDER

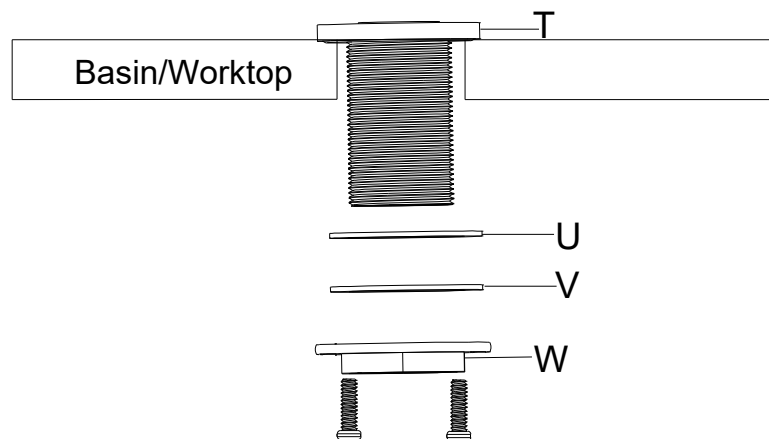

1. Pass the handheld shower holder (T) through the hole in the basin / worktop until it is centered inside the hole and the o-ring on the underside of the base forms a seal around the hole.
2. Use rubber washer (U) , metal washer (V) , and fixing nut (W) to securely fasten (T) to the basin/workbench until it fits tightly against the bottom of the hole. Tighten the fixing screws with a screwdriver. Please be careful and do not over-tighten, as this may damage the basin/workbench.


INSTALL THE HANDHEID SHOWERHEAD AND HOSE

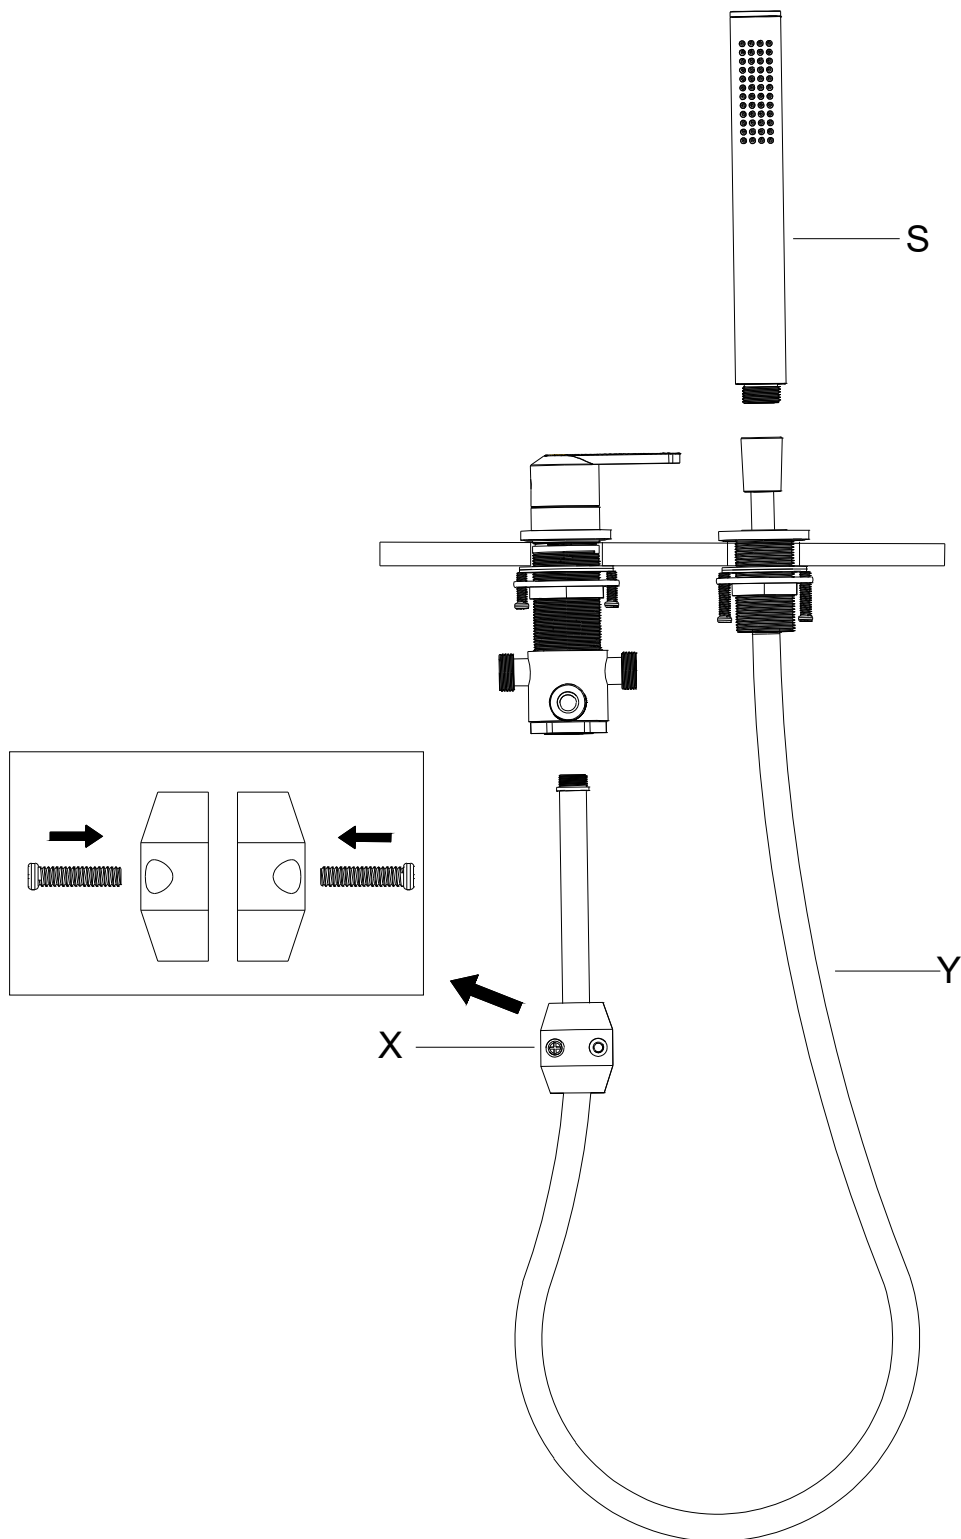

1. Connect the handheld shower hose (Y) to the socket (T) , then install the handheld shower head (S) .


2. Install a gravity ball (X) in the handheld shower hose and position it according to the actual weight.

INSTALL THE INLET PIPE

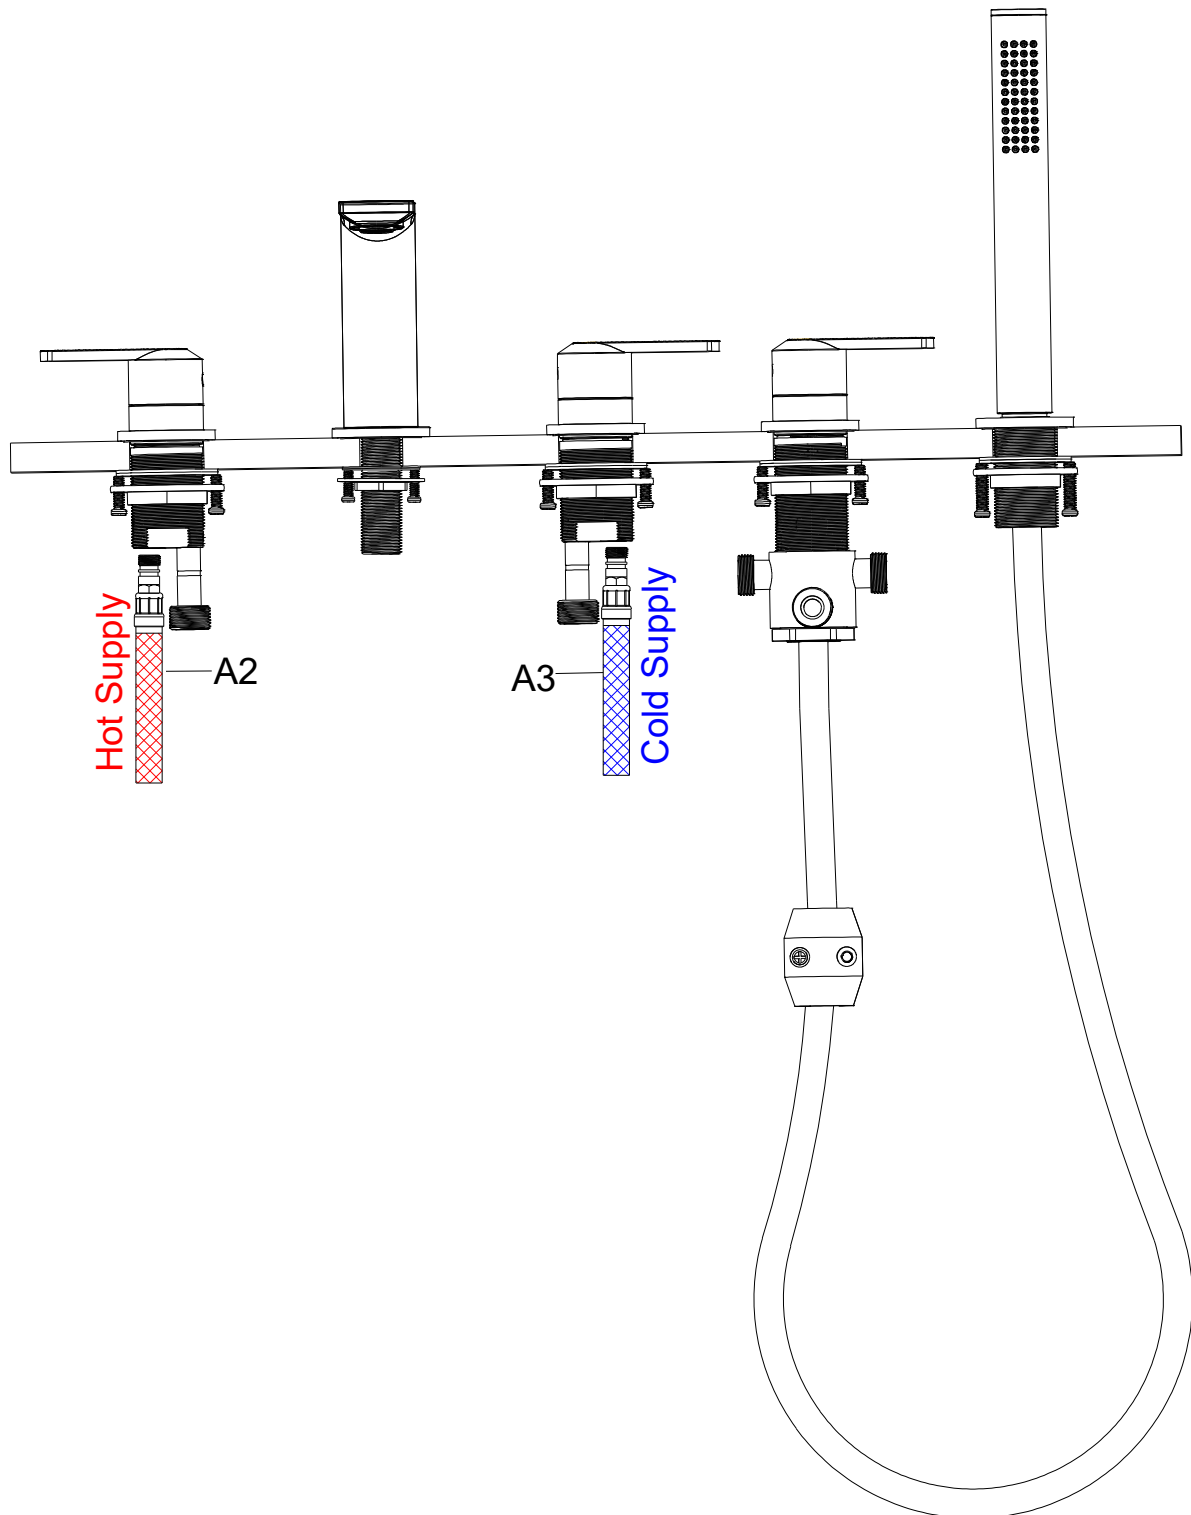

1 . With the water supply turned off, connect the flexible braided hoses to the corresponding threaded connection on the bottom of the valve assemblies. Connect the hot supply to the left hand valve assembly and the cold supply to the right hand valve assembly.

INSTALL THE OUTLET PIPE

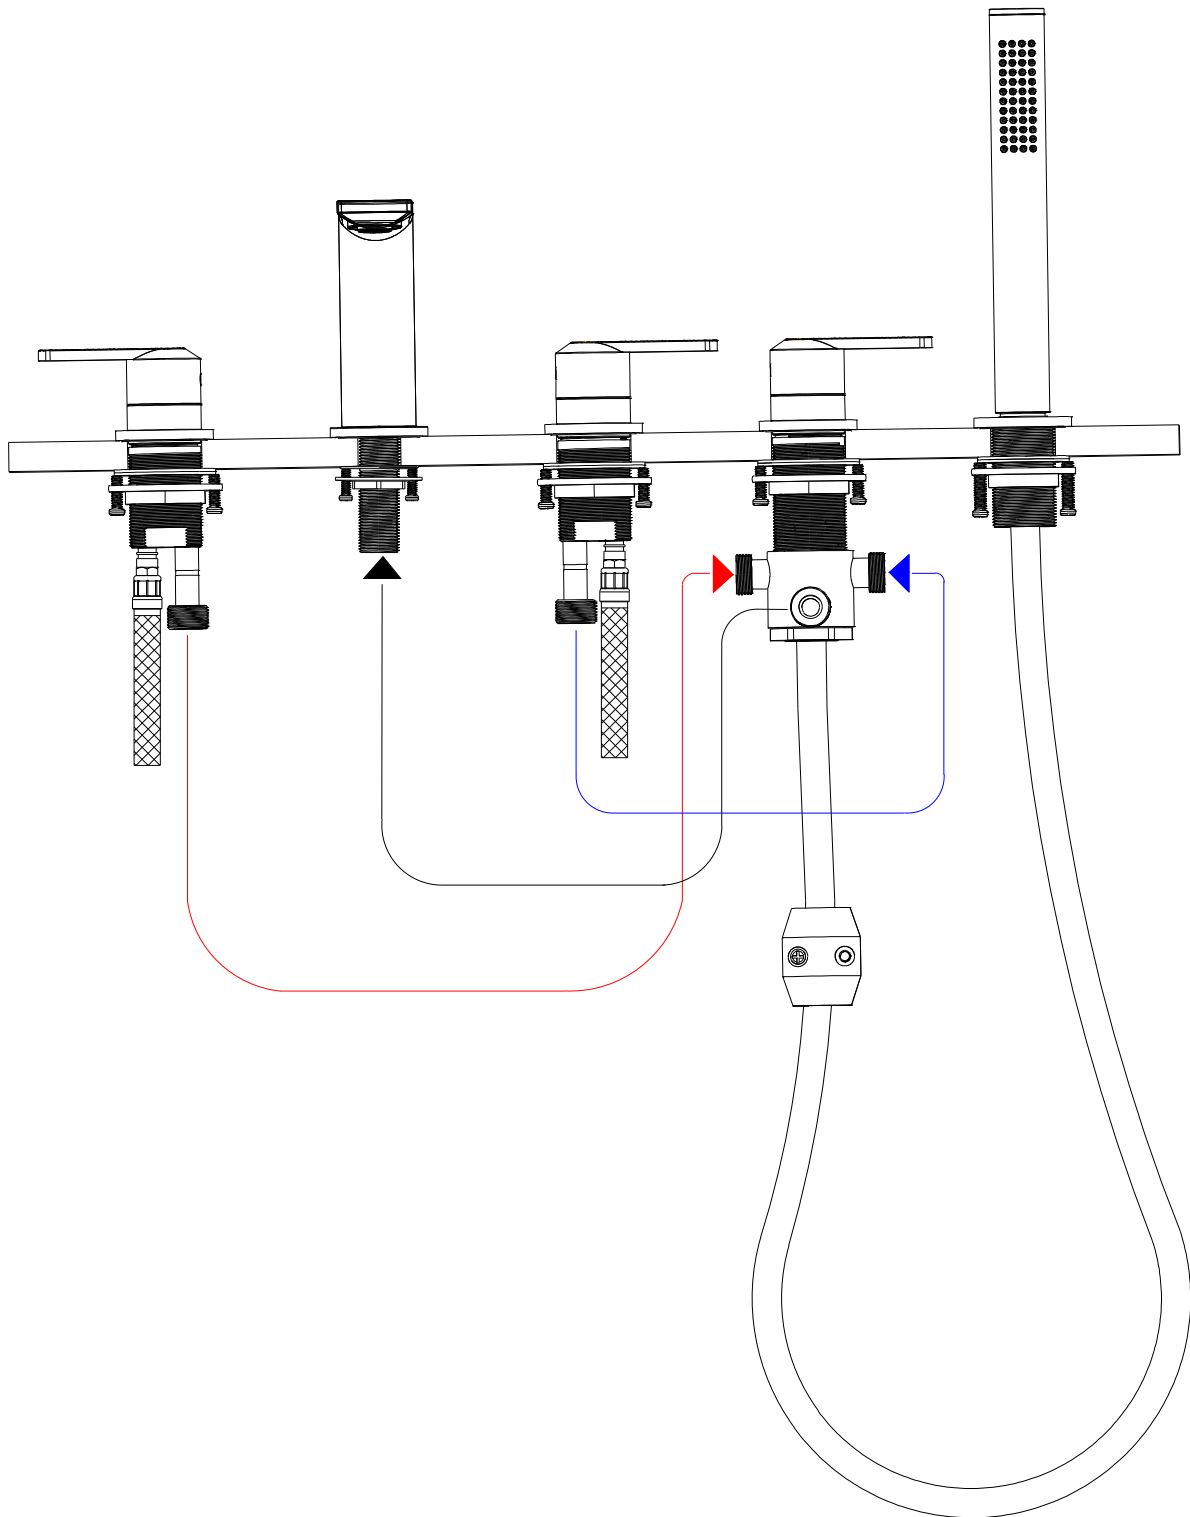

1. According to the three different colored lines in the diagram, the flexible braided hoses should be installed to the corresponding fitting.

2. Turn on the water supply and test for leaks on all connections.

AFTERCARE INSTRUCTIONS

Whilst this item has a high-quality durable finish, it should nevertheless be treated with care. Surfaces should be cleaned using only a soft damp doth and clean water & dried using a soft cotton cloth. Do not use an abrasive material such as a brush or scouring pad to clean the surface. The use of abrasive cleaners, alcohol disinfectants will alter the surface finish and void the warranty.

Do not allow products such as toothpaste, shaving cream, drain and glass cleaners to remain on the surface. Prolonged contact with these products will alter surface finishes and void the warranty.

GUARANTEE

We have complete confidence in this product and as such it is offered with a 15-year guarantee against defects in manufacture. This product must be fitted by a competent installer. If in doubt seek advice from a qualified professional.

The guarantee requires that this product be used in the manner for which it was intended and that it is installed & maintained in accordance with the fitting instructions and local water bylaws. The guarantee is invalidated should the product be damaged by water borne debris. make sure that supply pipes are clear of any debris prior to installation, this is particularly important on new plumbing installations.

In the unlikely event that this product should fail during the guarantee period we will either replace the faulty part or the complete unit as appropriate. This guarantee covers damage against reasonable wear and tear in use only. It does not cover damage incurred during installation, misuse or inappropriate maintenance.

We recommend that the cartridge is regularly cleaned in hard water areas to prevent lime scale build-up. Replacement cartridges are available to purchase by contacting the customer service team using the contact details below. Failure to follow the terms outlined above will invalidate this guarantee. Proof of purchase will be required to validate any guarantee claims.

Please visit our website www.jtpuk.co.uk for a full breakdown of the guarantees on separate items within our products.