


Coordinated Bathrooms Designed For You

Installation & Maintenance Instructions

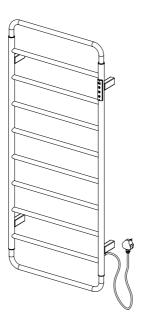

AERO ELECTRIC TOWEL RADIATOR 1130

CONTENTS

| Dimension | 02 |
|--------------------------------|----|
| Spare Parts | 03 |
| Technical Specification | 04 |
| Installation Steps | 05 |
| Replacement of control panel | 07 |
| The guide of the control panel | 08 |
| Stand-by mode | 08 |
| Power-on mode | 08 |
| Adjust Temperature | 09 |
| Test | 09 |
| Troubleshoot | 10 |
| Maintenance & Cleaning | 10 |


Important

The product is designed for household or residential use. You are advised to have the product installed by an authorized professional installer. Make sure the product is properly connected to230V and is earthed.

WARNING: This device is not designed to bear the weight of a person, and no one should therefore climb onto it.


This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they are supervised or have been given instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance.

Cleaning and user maintenance should not be carried out by children without supervision. Children must be supervised at all times to ensure that they do not interfere with the product.

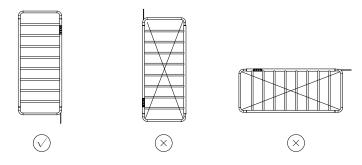



WARNING: The product must never be installed its control panel at the below. This product must not be installed horizontally.

Dimension

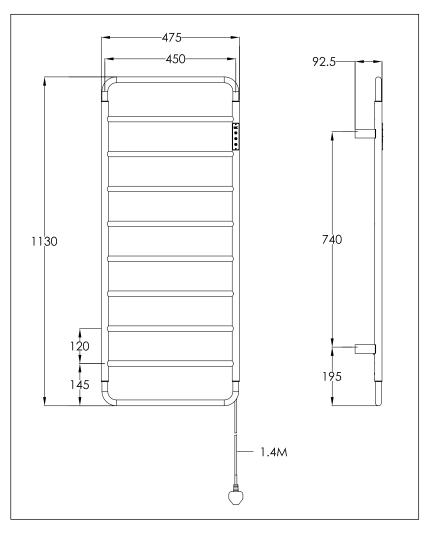


Spare Parts

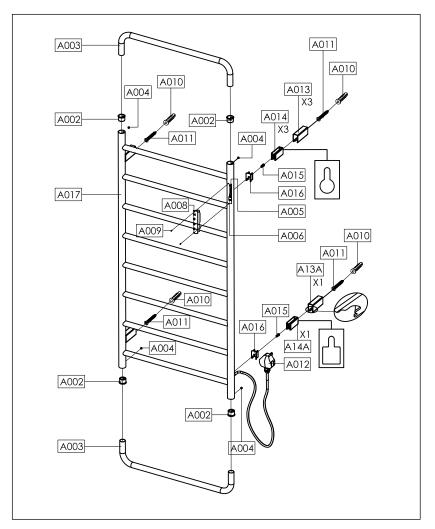


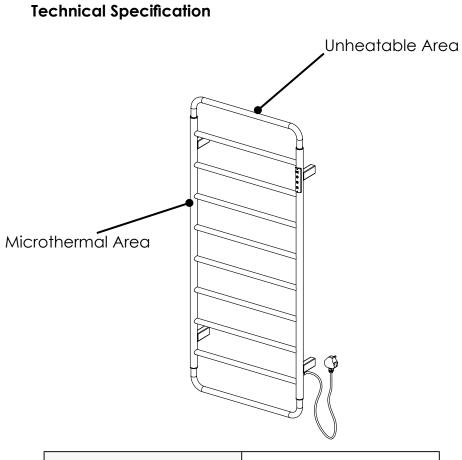


| Frequence | 50Hz | |
|---------------------|-----------------|--|
| Rated power | 120W | |
| Votage | AC230V | |
| Heating time | 5-10min | |
| Heating temperature | 45-60 °C | |
| Ingress protection | IP4 | |
| Heating method | Dry heating | |

Installation Steps

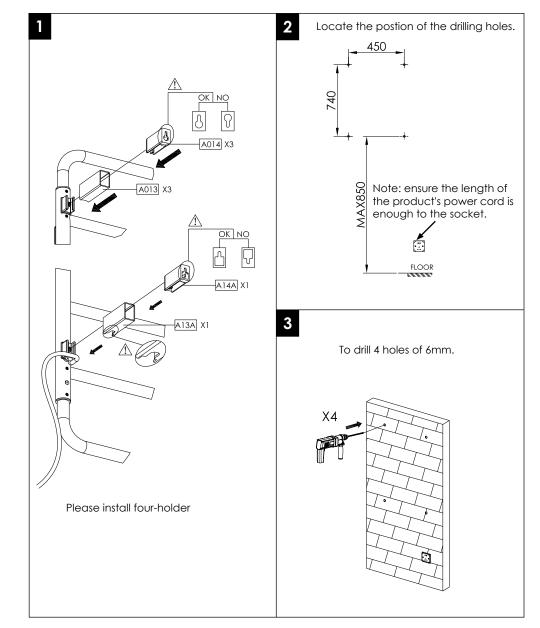

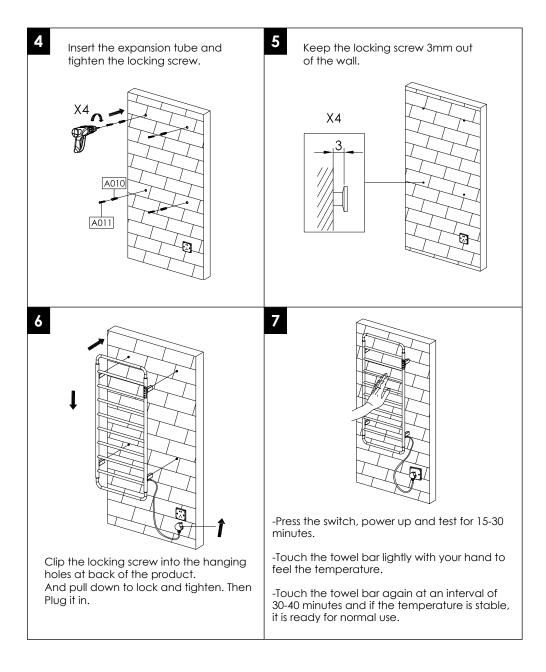


Replacement of control panel

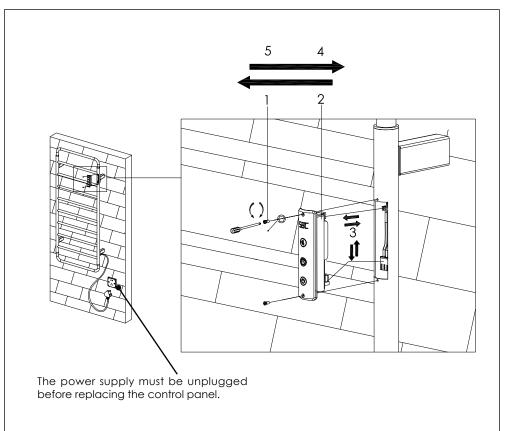

The guide of the control panel

| Søc | Screen |
|-----|-------------------|
| (1) | Ajust Temperature |
| ٢ | Timer |
| ٢ | On/Off |

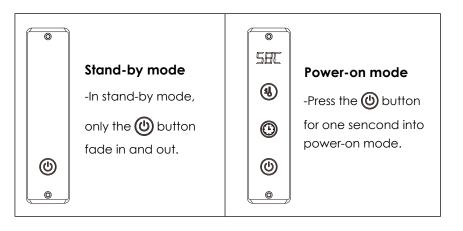

Switch on & off

After connecting the power supply, and the beep sounds into the stand-by mode.

In stand-by mode, press and the ④ button for 5 seconds to change Celsius or Fahrenheit (factory default is Celsius), the buzzer will ring when the setting is successful.

To switch the product on, please press the (b) button for one second. To switch the product off, please press the (b) button for one second again.

Timer

With the power on, please press the 🕑 button to set the timing. Available Timing:1H-2H-3H-4H-5H-6H-7H-8H.

Adjust Temperature

With the power on, please press the 🕲 button to set the temperature.

Available Temperature:45 $^\circ$ (115 $^\circ$) , 50 $^\circ$ (125 $^\circ$) ,55 $^\circ$ (135 $^\circ$) ,60 $^\circ$ (145 $^\circ$)

With the power on, Press the 🚯 button for one second to switch to: real-time temperature/timed time alternating display.

Test

When an abnormality occurs in the circuit, the chip automatically detects it and displays it on the screen, while the circuit carries out automatic protection to force the radiator to be off.

Troubleshoot

-Please troubleshoot according to the display on the screen.

| E1 | Temperature sensor open-circuit. |
|----|----------------------------------|
| E2 | Temperature sensor short-circuit |
| E3 | Overtemperature protection |
| EO | Leakage protection |

Maintenance & Cleaning

The product does not require any type of maintenance. We recommend that all parts of the product are kept clean (behind, underneath, upper fins, etc.). Do not use any abrasive product on the steel main body. Clean it with a damp cloth and a pH neutral soap, and the control panel with a dry cloth.

