

Assembling parts:

- 1) 1 x fixing part (01, 06~11)
- 2) 2 x fixing part (02-05)
- 3) 1 x hose F1/2-F1/2-1500 (12)
- 4) 1 x tool




Mounting instructions

- 1).Put the shower column(06) onto the mixer body(01), then with the 2pcs screw(05) lock tightly and fixedly.
- 2).Regulate good the shower column(06) distance, then install the fixed part(07) on the wall.
- 3).Screw the 2pcs eccentric connection(04) into the pipe which has been fixed in the wall.
- 4).Put the 2pcs washer(02) into the hexagonal nut which has been fixed on the mixer body(01).
- 5).Put the rosette(03) onto the eccentric connection(04), and then screw the hexagonal nut onto the eccentric connection(04) to fix the mixer body(01).
- 6).Screw the screw(08) onto the shore to fix the shower column(06).
- 7).Screw the top shower(09) onto the shower column(06) to fix.
- 8).Install the bracket(10) on the wall, then put the hose(12) links the mixer body(01) and the hand shower(11).

Installation Specification



※ Installation precaution

1. --Working pressure : min 0.05Mpa(0.5Bar) and max 1.0Mpa(10Bar)
--Working temperature : 4°C-90°C
2. Cartridges of body have been all checked and adjusted by factory, Please do not attempt to dismantle by yourself.
3. In order to avoid the stop of the tap, please do remove the dirt in the water pipe before installing it.
4. After installation, please check all the joint if connecting closely, without leaking.

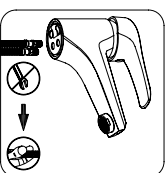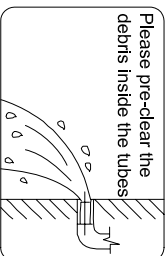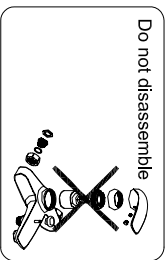


※ Maintenance and service

1. Please clean the dirty of surface with water and soft cloth.
2. Clean the dirty of surface with cleanser listed as follow:

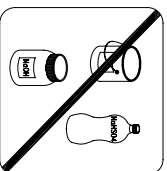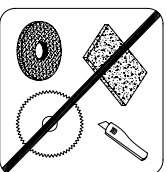

- ① Soft liquid cleanser
 - ② Achromatic glass cleaner
 - ③ Powdery cleanser which Completely dissolved without abrasive function
 - ④ Cleanser without abrasive function
3. Prohibit cleaning with the strong alkaline solution and acidic solution, or with cloth, paper and cleanser which with abrasive function
 4. Please clean with water and wipe with cloth after the cleansing work.
 5. When encountering trouble, the method lists as follow:
 - ① Loosen the flush water valve, when water yield is small.
 - ② Take down the shell, wash the dirty when the water yield is small or none.
 - ③ Rotate the shell of the aerator, then take out the steam and water flow control to increase the flow, when the pressure is low.


Basin faucet

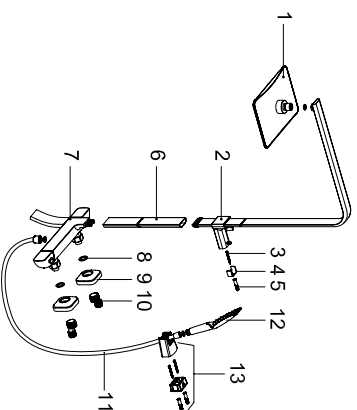


Product Installation component

Item	Name	QTY
1	Top shower	1
2	Top tube	1
3	Screw	1
4	Fixing set	1
5	screw	1
6	Main tube	1
7	faucet	1
8	Washer	2
9	Rosette	2
10	Eccentric connection	2
11	Shower hose	1
12	Hand shower	1
13	Shower set	1


Installation Steps

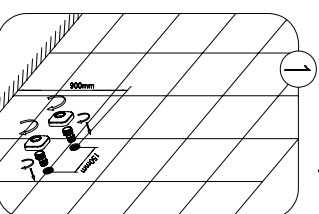


1. First, drilling a hole on the wall according to the above picture. And screw the eccentric connection(10) into the hole, then screw the rosette(9) in to the eccentric connection(10).

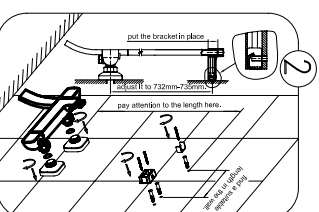


2. Screw the faucet(7) into eccentric connection (10) with washer(8), drilling a hole as the picture showed, then install the screw(5) and the screw(5). Set the fixing set of the shower set in a suitable place.

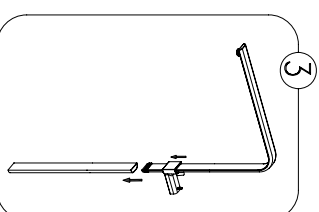


3. Insert the top tube(2) into the main tube(6), pay attention not to break the washer.

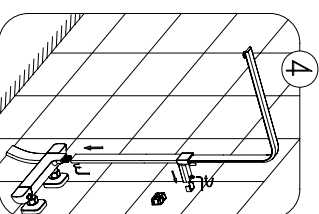

4. Set the shower pipe into the faucet(7), then install the fixing set(4) into the bracket of the top tube(2). Then lock the screw with SW1.5 hexagon wrench.

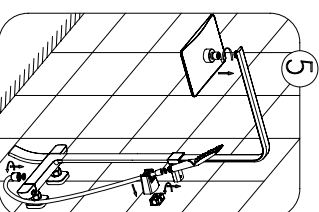

5. Screw the top shower(1) in the suitable place with washer as the picture showed, install the shower hose(11) into the bracket of the shower set. Screw one side of the shower hose(11) into shower mixer with washer, and lock the other side with hand shower(12). Then install hand shower(12) in the bracket(13).

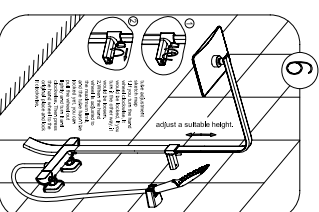

6. Adjust the top tube(2) into a suitable height, lock the hand wheel until it is tight.